



120 HNG
ADAPTER NPT TO BSPP

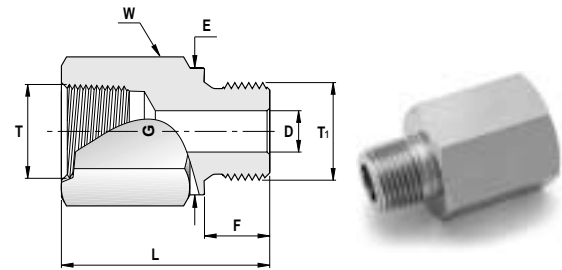


Ordering Information	T Female NPT Size	T1 Male BSPP ISO 228/1, BS 2779	L		F		E Dia.		D Min. Opening		W Hex. Flat in
			in	mm	in	mm	in	mm	in	mm	
120HNG _ 1/8	1/8	1/8-28	0.99	25.1	0.28	7.1	0.54	13.8	0.16	4.1	9/16
120HNG _ 1/4	1/4	1/4-19	1.32	33.5	0.44	11.2	0.70	18.0	0.23	5.8	3/4
120HNG _ 3/8	3/8	3/8-19	1.41	35.8	0.44	11.2	0.85	21.8	0.31	7.9	7/8
120HNG _ 1/2	1/2	1/2-14	1.74	44.2	0.56	14.2	1.02	26.0	0.47	11.9	1 1/16
120HNG _ 3/4	3/4	3/4-14	1.89	48.0	0.62	15.7	1.26	32.0	0.62	15.7	1 5/16
120HNG _ 1	1	1-11	2.10	53.3	0.72	18.3	1.53	39.0	0.78	19.8	1 5/8

120 HRN
ADAPTER BSPT TO NPT

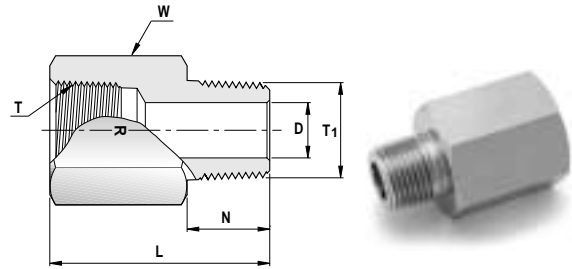

Ordering Information	T Female BSPT ISO 7/1, BS 21	T1 Male NPT Size	L		N		D Min. Opening		W Hex. Flat in
			in	mm	in	mm	in	mm	
120HRN _ 1/4	1/4-19	1/4	1.43	36.3	0.56	14.2	0.28	7.1	3/4
120HRN _ 3/8	3/8-19	3/8	1.51	38.4	0.56	14.2	0.38	9.6	7/8
120HRN _ 1/2	1/2-14	1/2	1.96	49.8	0.75	19.1	0.47	11.9	1 1/16

120 HGN
GAUGE ADAPTER BSPP TO NPT

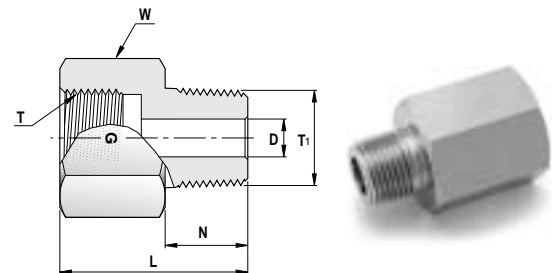

Ordering Information	T Female BSPP ISO 228/1, BS 2779 Size	T1 Male NPT Size	L		N		D Min. Opening		W Hex. Flat in
			in	mm	in	mm	in	mm	
120HGN _ 1/4	1/4-19	1/4	1.08	27.4	0.56	14.2	0.22	5.6	3/4
120HGN _ 3/8	3/8-19	3/8	1.27	32.3	0.56	14.2	0.26	6.6	15/16
120HGN _ 1/2	1/2-14	1/2	1.65	41.9	0.75	19.1	0.28	7.1	1 1/16

● Dimensions are for reference only, and are subject to change without notice.